

SMP series -+-UC40 user guide

actual product may differ from the manual.

Manual is for reference only

Due to continuous improvement,

Remarks:

used for long time.

transporting.

Safety Reminding

1.Please read this manual carefully before using.

National standard power cable and power cord with grounding is suggested, so as to ensure stable power supply.
 No peeking into the lens while projector is working.

4. No cloth, blanket or any other material that could stock ventilation

holes should be placed around the projector while it is working.

5. No water-proof function for this projector, no such apparatus as vase or cup should be put around the projector.

7. Please turn off the projector and cut off the power supply, if it is not


8. Please use factory original foam and other shockproof material while


9. If found projector defected, do not attempt to repair it by yourself.

Please contact with your distributor or factory directly.

6. Projector should be stocked and used at dry and clean condition.

User Manual should be read carefully if you are using the projector. If any difference between user manual and actual projector. Please subject to the actual projector.

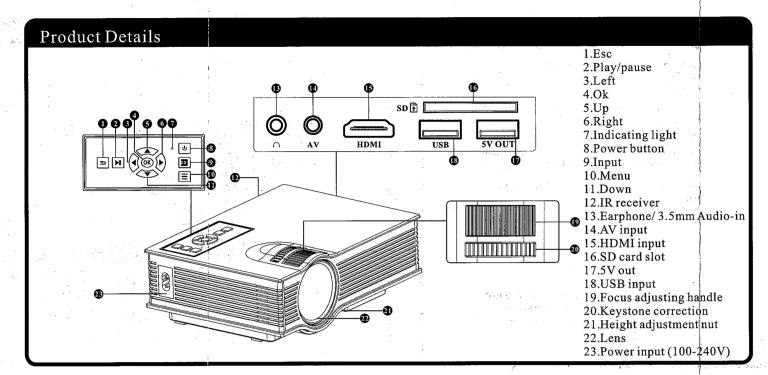

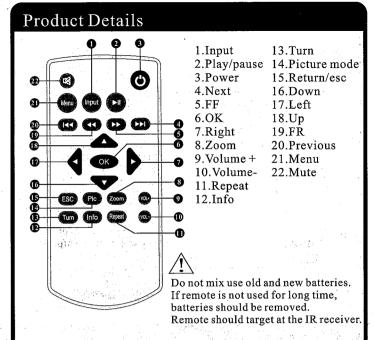

# SMP illustration

SMP is short for simplified micro projector. It is one kind of projector which has simplified system structure design, but with multifunction. (Also means easy handling micro

This kind of projectors use the simplified system to reduce cost but at the same time supply end users with a projector with simple setting thus can be easily used.

Simplified micro projector usually uses LCD as the image system and LED as light source.






### Operation Instruction


#### 1.Preparation

Connect the projector with power cord (as pic 1 showed), then plug the power cord into AC connector. When the indicator light (as pic 2 showed) stops flashing,

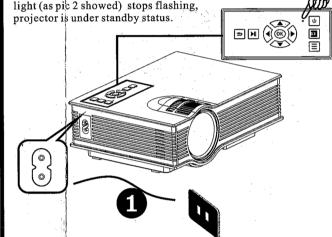

#### 2.Power on/off

Press the **b** button on remote or projector (as pic 3 showed).

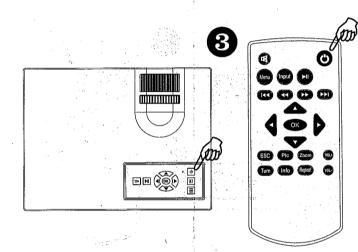

# 3. Multimedia boot screen

If choose USB or SD input, after open screen, a boot screen (as pic 4 showed) for multimedia will be showed.



Multimedia boot screen

# 4.Focus&Keystone correction

Focus


Put the projector with lens vertical to the wall or screen, turn on the projector and then adjust focus adjusting handle (As showed in 6) until the picture is clear.

Keystone Correction If projector is not vertically or horizontally placed, the image will present trapezoid twist. Keystone

correction technology refers to a way normalizing the twisted image via digital or optical technology.




Solution Rotate the keystone correction nut as NO.5 showed, until image twist be corrected. keystone correction angel is

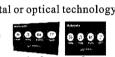

**∃⊞()∰()** 


Solution No solution for this kind of image twist for this projector.

# Product connection

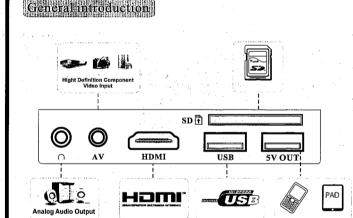

# Multimedia input

Insert the USB or SD card into relevant position as showed in picture below.

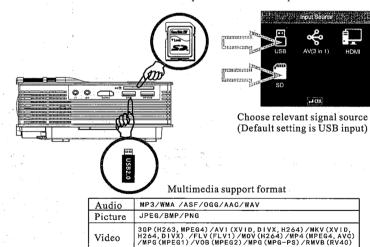

Press "OK" to choose the files you need to play, and press▶II to

Select relevant icon and

enter into the submenu.

Movie for video files

Pic for picture files Music for audio file display TXT for txt files display


If you want to play certain files, press enter to confirm, and then press > 11 to display.





#### AV input


Choose AV input, and connect projector as showed below

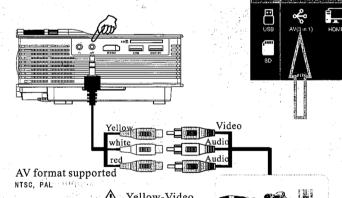

Yellow-Video White-Audio

Red---Audio

#### HDM1input

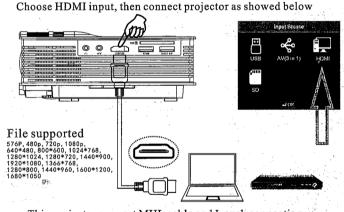


This projector support MHL cable and I-push connection. Detailed using method please refer to MHL and I-push user

# Product connection

# 5.Audio out

Can connect with 3.5mm head phone or similar audio devices.

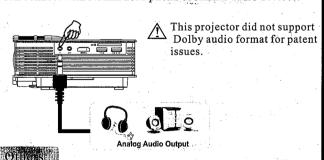

While working, 5V out can be used to charge cellphone or tablet



### Menu Operation

# Pic menu operation:

Press "Menu" on the remote control, or "≡" on the projector to get OSD, and then press "◄/► "until you get picture menu. then use "▼/A" to choose the submenu you need to adjust.

Available adjusting items are: picture mode, color temperatu aspect ratio, noise reduction screen, rotate.

volume on/off, surround

sound: on/off

and EQ.



Sound menu operation Press "Menu" on the remote control, or "≡" on the projector to get OSD, and then press "◄/► "until you get sound menu. Then use "▼/▲" to

choose the submenu you need to Available adjusting items are: Sound mode, balance, auto

Time menu operation

Press "Menu" on the remote control, or " = "on the projector to get OSD, and then press "◄/'➤ "until you get time menu. then Use "▼/A" to choose the submenu you need to adjust.

Available adjusting items are: Clock, off time, on time



# Option menu operation

Press "Menu" on the remote control, or ‡≡" on the projector to get OSD, and then press "◄/► "until you get option menu. then Use "▼/▲" to choose the submenu you need to adjust. Available adjusting items are:

Language setting, restore factory settings Super color Software update

#### Play menu operation


While play videos by USB or SD, press "ok" button, then we can get a submenu By using this menu, you can achieve most of the play function you need.



Specification

Specification	)II		<u> </u>
Image system	TFT LCD	Color	16.7M
Brightness	800 lumens	Keystone correction	±15°
Contrast ratio	800: 1	Power supply	100V-240V 50/60HZ
Native resolution	800*480RGB	Power consumption	55W(Max)
Supported resolution	1920*1080	Input	USB/A V/SD/HDMI/IR
Lamp	LED	Output	5V out-500mA
Life	20000hours	Speaker	8Ω *2W
Lens	F=125	System	Multimedia
Operation	Manual	Languages supported	Chinese,English etc.
Projection distance	1.07-3.8m	Product size	201mm*153mm*67.5mm
Projection size	34-130"	N.W.	1kg
Aspect ratio	4:3/16:9	Other	Multi-funtions keyboards



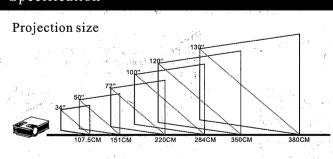

	<u> </u>
Distance	Projection size
107.5cm	34 inches
151.0cm	50 inches
220.0cm	72 inches
284.0cm	100 inches
350.0cm	120 inches
380.0cm	130 inches

Thanks for choosing projector UC40. During use if you have any question, please feel free to contact the seller. We will be pleased to offer you any help you need.